

## AA-971 LIFT LEVER INSTRUCTION MANUAL

### APPLICABLE LINEAR GAUGES

DG-525, DG-525H, DG-825, DG-925, EG-225, EG-225F

### MOUNTING METHOD

Remove the cap on the linear gauge.


Mount the lift lever to the linear gauge.

Remove the top point and O-ring from the spindle.

Mount the O-ring on the support post and screw in the spindle.

Screw the top point onto the support post while grabbing the lift lever.

When doing this, put a nylon washer between the lift lever and the top point.

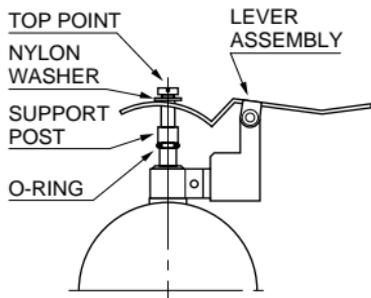

### CAUTION

When mounting and removing the top point and support post, take care that torsional loads are not applied to the spindle.

As shown in the figure, wrap rubber bands or a similar material around the spindle and hold securely to turn the top point and support post.




# AA-971 リフトレバー 取扱説明書

## 適合リニアゲージ

DG-525, DG-525H, DG-825, DG-925

## 取付方法

本体のキャップをはずします。  
 本体にリフトレバーを固定します。  
 スピンドルについているトップポイント、O-リングをはずします。  
 支柱にO-リングを付けてスピンドルにねじ込みます。  
 リフトレバーを挟みながらトップポイントを支柱にねじ込みます。  
 このとき、リフトレバーとトップポイントの間にナイロンワッシャーを挟んでとめます。

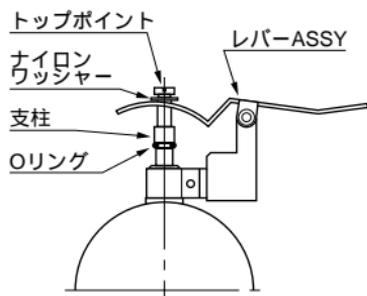

## ご注意

トップポイント、支柱の取付及び取り外しの際、スピンドルにねじれ力が加わらないように十分ご注意ください。  
 図のようにスピンドルにゴムバンド等を巻き、手でしっかりと押さえてトップポイント、支柱を回してください。

